

SENSALERT[®] PLUS

Remote Sensor Head

Remote Mount Sensor Head in Hazardous Classified Area:

- Ability To Place Sensor in “Difficult” Locations
- Place Sensor Head in Hazardous Area and keep the User Interface in Non-hazardous Area
- For Duct Mount or Sample Draw Installations
- Remote Gassing Accessory Available

Remote mounting of the sensor head allows the sensor to be mounted closer to the area of concern while keeping the transmitter at eye level. Applications where the target gas is either heavier or lighter than air are excellent examples where remote sensor mounting may be very beneficial to maintaining the highest level of safety – furthermore certain regulations may require it.


Remote mounting kits includes everything needed to remote mount a sensor head with exception to the cable. Sensidyne recommends use of 0.5 mm² (20 AWG) to 2.5 mm² (14 AWG) cross sectional area cable to ensure proper operating voltage at the monitor.

Sensidyne employs a team of experienced gas detection professionals who are ready to assist with your specific application. Call 800-451-9444 or e-mail info@Sensidyne.com.

Remote Sensor Kits

Remote Kit for General Purpose821-0207-01

Remote Kit for Div. 1 or Zone 0/1821-0207-02

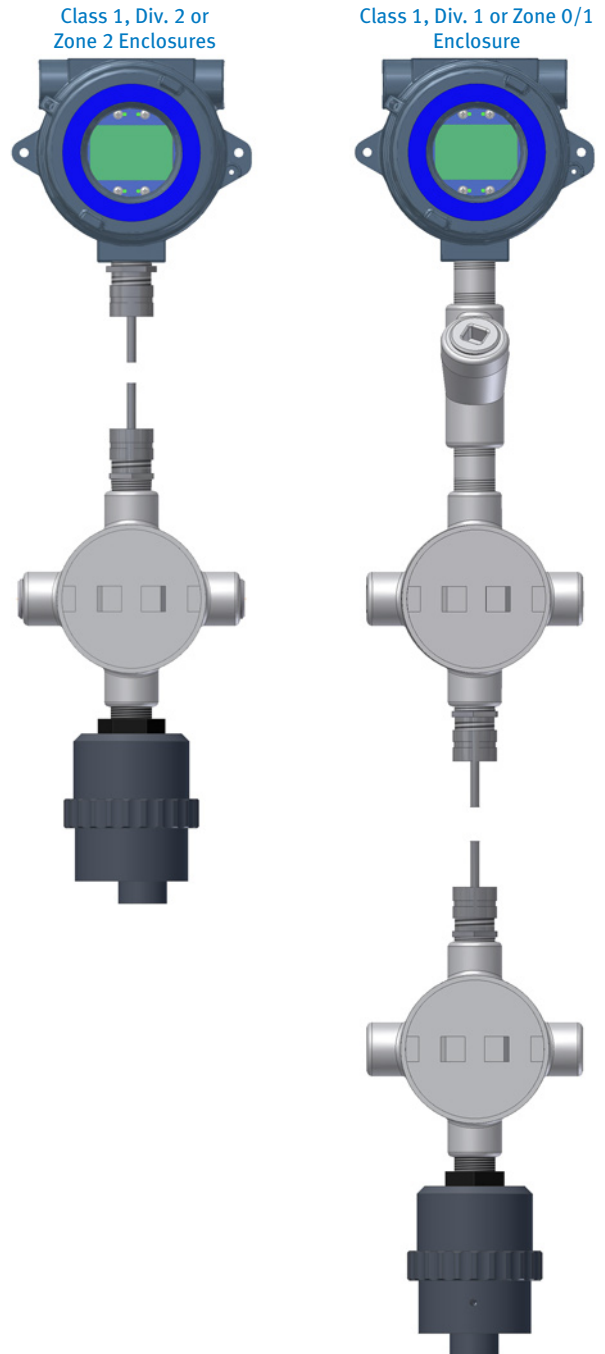

See reverse for a detailed drawing.

